



SKYBLUE MOTORS

Product Manual

BEETLE



Declare

At the beginning of printing, this manual contains the latest product information at that time. In our continuous pursuit of product design and quality improvement, we may make changes to the design of our products at any time, which may cause certain inconsistencies between the instructions and the actual material without prior notice. If you have any questions, please contact us. The copyright of this manual belongs to SKYBLUE MOTORS (HK) CO., LIMITED, without the written consent of the company shall not be reproduced, offenders shall be prosecuted.

Catalog

1.Introduction.....	01
2.Safety of driving.....	02
3.Scooter overview.....	03-06
4.Key configuration and data.....	07
5.Daily maintenance.....	08

1. Introduction

Dear customer,

Welcome to join electric scooter driver. To enjoy a safer and more enjoyable driving experience, SKYBLUE MOTORS has the full content of these instructions before driving. Your safety is not only related to your own ability to alert and use, but also if you are familiar with the mechanical performance of this product. Every time before driving, you should check it carefully. In addition, periodic maintenance is also very important. Please note that only a special repair station can know how to deal with the problem and how to ensure optimal operating performance.

Warning!

1. Driving age must be in accordance with local laws and ordinances that govern and/or restrict the use of the electric scooter. Laws and ordinances vary considerably from one municipality to another, it is your responsibility to know and respect your local restrictions.
2. Do not remove or disassemble parts privately. Please contact the service center or dealer for spare or repair parts.
3. Do not lend the vehicle to someone who is not familiar with the driving process
4. Avoid sudden stops or braking to avoid accidents.
5. Avoid drunk driving.


2. Safety of driving

Notes: you must be aware of all local laws and ordinances that govern and/or restrict the use of the electric scooter, and please respect the local highway code and pay attention to safety on the road, check the scooter before driving.


1. Check tire pressure regularly (front and rear 225kPa) before driving.
2. Check the functionality of the brakes and lamps.
3. Adjust your mirror for your best visibility.
4. Check if the battery is full before driving and start at low speed.
5. Slow down and avoid sudden braking in turns.
6. Lock the scooter when you park.

1. Rear view mirror	2. Direction wheel	3. Operation panel
4. Reflector	5. Turn signal	6. Front bumper
7. Tire	8. Front wheel	9. Pedal board
10. Seat bucket	11. Tire	12. Rear wheel
13. Rear bumper	14. Seat	15. Hand rest
16. Seat backrest		

3. Scooter overview

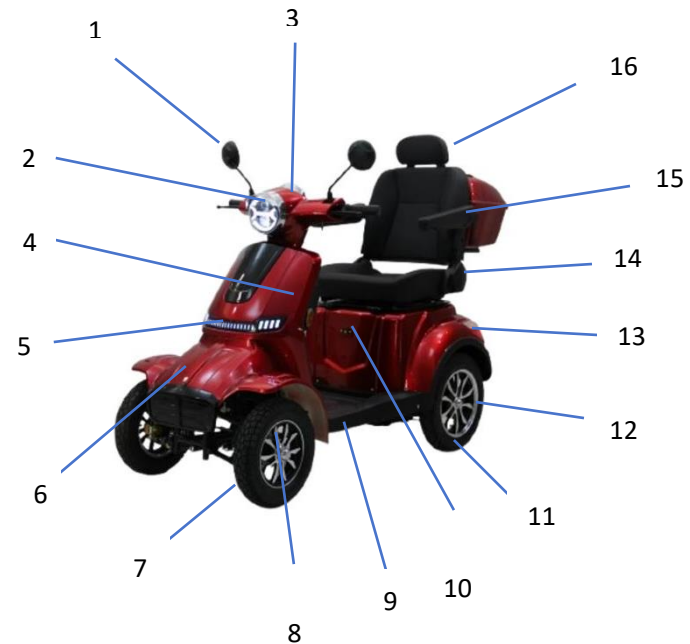


3.1. Detailed pictures

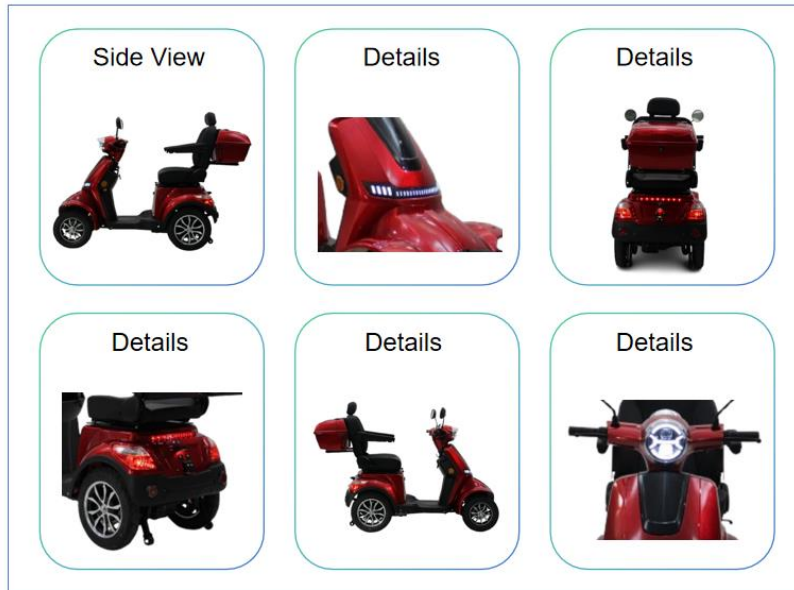

Warning: the modification is illegal. A modified vehicle will affect its structure or performance, which will shorten the life of the vehicle. The modification will not be covered by the warranty. No warranty can be provided if you do not purchase any original spare parts..

3.2. Operation Panel

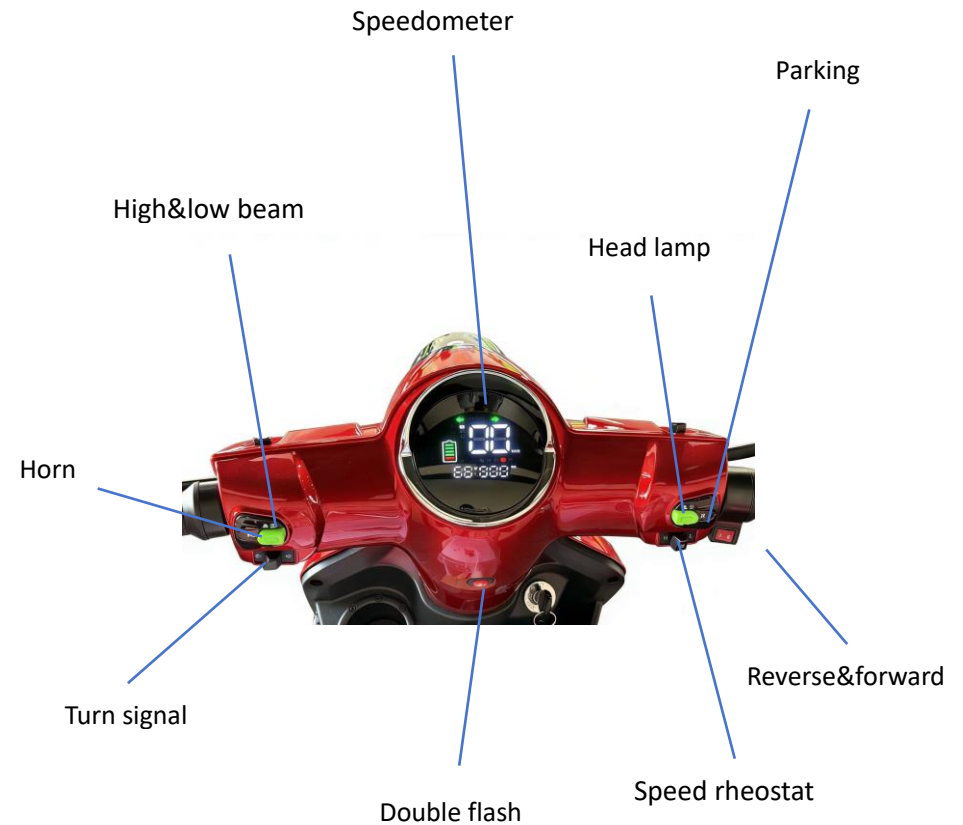

3.3. Remote Controller

★Button Instruction of the Electric Scooter Remote Controller

In the case of power off,you press this button,the electric scooter can be set as the situation of alarm.↵

Push this button twice continually ,
without key the power will be on.↵



This button is for canceling the alarm and shutting of the power without your key.↵

This button is for finding your scooter.↵

4. Key configuration and data

Scooter Dimension

Length:1495 mm

Width: 685 mm

Height: 1325 mm

Scooter Mass

unladen mass:95 kg

Actual mass: 200 kg

Technically permissible maximum laden mass: 215 kg

Configuration

Motor:1000w

Tire: front 300-8; rear 300-10

Performance

Maximum speed of vehicle:25 km/h

Electric range: 50km

Battery

60v 20ah

Daily Maintenance

1. please wipe the scooter regularly and keep it clean. However, do not flush electrical circuit parts and teeth with water.
2. Please avoid putting the scooter under high temperature and humid environment places. In case of a rainy day outside, please protect the rotating handles, the battery box and the control box.
3. Do not arbitrarily reassemble or reshape the scooter and use the unqualified parts. Please purchase after-sale parts from our authorized service center.
4. Check the brake, fasteners and parts regularly to ensure they are loosened and repair quickly if problems are found check all lubricated parts if they are oiled, such as a shock absorber.
5. While driving, always check if the wheels are in normal rotation, tire in sufficient pressure, brake in normal operation brake disc or brake drum in case of were turned off and the indication lights to be normal.
6. While driving, keep sharp objects away from the road, otherwise the tire would be punctured.
7. Do not charge the scooter over 10 hours. Make sure the voltage is correct before charging and the standard voltage is 220v/110v. During charging, the charger should not be covered and should be kept away from the heat source otherwise the battery would be damaged. Stop charging immediately if tumors are found on the battery.